

TRAMONTINA

HOME APPLIANCES

Ice Maker



IMPORTANT

The use of **distilled or purified water is recommended**, as regular tap water has a higher mineral content and may leave residues in the Ice Maker.

CLEANING AFTER USE

- When not in use, and prior to storing the Ice Maker, ensure the appliance is clean and the interior is completely dry.
- First press the **ON/OFF** button and wait for the appliance to stop running.
- Unplug the Ice Maker from the wall outlet.
- Drain any remaining water from the water reservoir: Moving the front edge of the Ice Maker over a sink and opening the water drain plug.
- Remove the ice bin and scoop, and thoroughly dry the water reservoir with a soft cloth/paper towel.
- You can use can use $\frac{1}{4}$ cup white distilled vinegar with 1 cup of water to mop inside of the unit to remove residues.
- Hand-wash the ice bin and scoop with warm soapy water and dry thoroughly.
- Wipe the exterior surface with a soft damp cloth and dry thoroughly.
- DO NOT rinse the Ice Maker under running water or immerse the appliance in water.
- DO NOT clean the Evaporator Fingers.
- DO NOT use harsh detergents or bleach to clean the Ice Maker.
- Leave the cover open to allow the interior to completely air dry prior to storage.